



CNCR 300 Series Quick Start Guide



Pro-tip:

Activate your sensors to the Gateway from the comfort of your office, workshop, lunchroom, then install. Detailed instructions can be found in manuals listed on the documents tab of binmaster.com.

Prepare:

- > On a smart phone, download VegaTools App at the Apple Store or Google Play Store. Then, download BinCloud App on Apple or Google.
- > Unbox your sensors and plan installation. LoRa communication enables a range of several kilometres outdoors with some building penetration. Thanks to battery power, sensor connection to gateways can be easily verified before installation.
- > Take pictures of each sensor label and the Gateway label for reference and troubleshooting.

Let's go! Grab a sensor and open VegaTools app on your phone.

1. Press RFID/NFC Functions
2. Press Sensor Activation
3. Place your phone just to the side of the sensor logo (this activates Bluetooth)
4. Your sensor will appear. Click it.
5. Enter the Bluetooth access code found on the sensor label next to the smart-phone icon.
6. You'll see a picture of the sensor with a green reading. Press Setup below that picture.
7. Press radio transmission
8. Press LoRa settings
9. Verify Device EUI and App EUI look correct and press execute
10. Press back button
11. Press execute (ya, sounds silly, but necessary)

Let's dig into BinCloud!

12. Open BinCloud app, find your location and verify the reading (might take 10-15 minutes)



VegaTools
Apple Store



VegaTools
Google Store



BinCloud
Apple Store



BinCloud
Google Store



Download both
VegaTools and
BinCloud

Visual Guide

